

adjustable
up to 3000
(10')
standard

adjustable
up to 30500
(100')
custom



30 (1.2')

±140 (5.5')

approx 0.7kg (1.5lb)

- PENDANTS: one
- MOUNTING: mini canopy 30mm (1.2') in diameter x 11mm (0.4') deep
- LAMPING: 0.4w LED
- COAX: adjustable. 3000mm (10') standard / up to 30500mm (100') maximum
- MATERIALS: blown glass, copper mesh, braided metal coaxial cable, electrical components, brushed nickel canopy
- WEIGHT: approximately 0.7kg (1.5lb)
- POWER SUPPLIES: remote mounted (fixture does not hook directly to a junction box). Drivers included

DESCRIPTION

The 'm' designation in this 76 variant refers to the mini canopy size. The mini canopy is just over 30mm (1.2") in diameter and 11mm (0.4") deep, which creates a subtle profile that will essentially disappear into the application surface. The pendant drop lengths on this light fixture are adjustable up to the specified maximum.

A vacuum is introduced to a strata composed of hot white and clear glass with copper mesh between. The vacuum causes the white layer to pull away through the embedded mesh, leaving numerous tendrils of white glass suspended within an interstitial space as it goes.

NOTES


- + Purchase replacement lamps online at www.bocci.com/shop/bulbs
- + Unless otherwise specified, a single class 2 driver will be sent for every 15 LED fixtures
- + Requires drivers to be remote mounted
- + Please note that the copper mesh used within the 76 may be affected by heat and oxidization during the glass blowing process. These small oxidized edges can sometimes separate within the pendant; this is a natural characteristic of the metal and is seen as an evolution of the piece as it ages.

US Patent # D817,524 S
EU Design Patent # 002840975-0004-0007

Made in Vancouver, Canada

Vancouver
sales@bocci.com
www.bocci.com


Berlin
europe@bocci.com
www.bocci.com

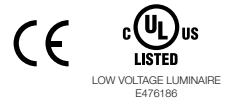

MINI CANOPY

76.1m


PRODUCT SPECIFICATION

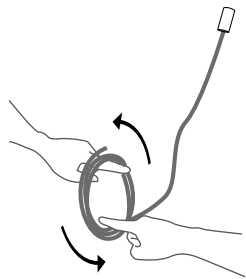

1

Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.


Use patience: allow the cable to uncoil completely to avoid kinks.

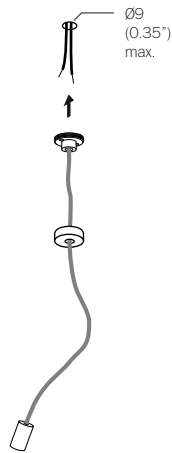

2

Drill a maximum 9mm (0.35") diameter hole in ceiling material. Pull low voltage house wire through the hole.

Note: There MUST be adequate backing, not just the drywall. This low voltage wire will run to a remote mounted power supply.

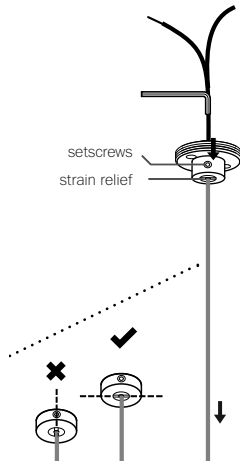

3


Thread the coaxial cable through the canopy, use a 2mm Allen key to loosen the setscrew in the canopy and gently feed the cable through until you have reached your desired drop length.

Use Allen key to tighten the setscrew to hold the strain relief and secure the coaxial cable at its new length. Perform a gentle tug test to ensure it is secure.

DO NOT OVERTIGHTEN.

Note: The strain relief is a black plastic collar around the coaxial cable. There is a single slot opening on the side of the strain relief component. It is essential that this opening is oriented at 90 degrees to set screw chamber. There can be no contact between the set screw and the cable.

RISK OF ELECTRIC SHORT!

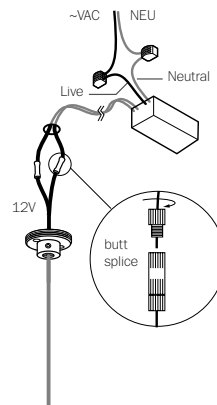


4

Connect the black wire to black and white wire to white wire.

Connect the house wires to the coaxial cable using #16 butt splices (stagger the splices). Use raw butt splices and heat shrink to simplify the installation.

For multiple pendant installations, ensure that the braided outer wires are all connected to one 12V output wire and all inner insulated wires are connected to the other or a short will occur.

Note: Insulated core is positive and braided exterior is negative.

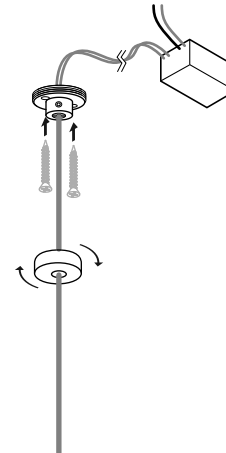


5

The client is responsible to ensure fasteners are attached to a robust structural substrate.

Affix mini-canopy to ceiling surface with fasteners provided. Twist the threaded cover into place.

Turn power to fixture on.

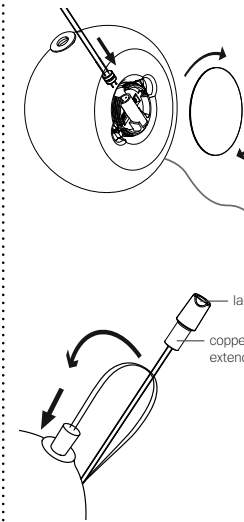

6

Remove the centre cap from 76 pendant. Install 76 pendant by sliding the lampholder at the end of the coaxial cable into the groove in the pendant hardware.

Bocci 0.4w LED lamps are included. Plug the lamp into flexible copper extender. Ensure power to lamp is working correctly.


Hold lamp wires away from the pendant to ensure they do not interfere with spinning cap.

Thread centre cap back on to pendant hardware.

DO NOT OVERTIGHTEN.

Bend the insulated wires and insert the lamp into the small hole in the pendant. Ensure that the lamp does not touch the inner glass bubble.

Note: when using a dimmer use only low voltage electronic dimmer

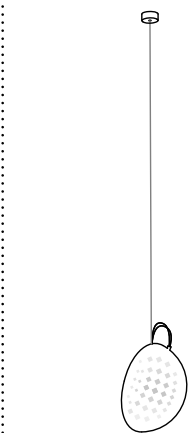

7

Clean fingerprints from surfaces.

For additional assistance, please contact Bocci:


Vancouver
sales@bocci.com
www.bocci.com

Berlin
europe@bocci.com
www.bocci.com

US Patent Pending

EU Design Patent #
002840975-0004-0007

Made in Vancouver, Canada




MINI CANOPY

76.1m

PRODUCT INSTALLATION INSTRUCTIONS

© 2021, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.com

BOCCI



adjustable
up to 3000
(10')
standard

adjustable
up to 30500
(100')
custom



116 (4.5')

±140 (5.5')

approx 0.7kg (1.5lb)

PENDANTS: one

MOUNTING: deep brushed nickel canopy 116mm (4.5") in diameter x 40mm (1.6") deep

LAMPING: 0.4w LED

COAX: adjustable. 3000mm (10') standard / up to 30500mm (100') maximum

MATERIALS: blown glass, copper mesh, braided metal coaxial cable, electrical components, brushed nickel canopy

WEIGHT: approximately 0.7kg (1.5lb)

POWER SUPPLIES: integral. Drivers included

DESCRIPTION

The deep canopy in this 76 variant refers to the canopy size depth capable of accommodating the driver inside (standard outside of North America and Latin America). The deep canopy is 116mm (4.5") in diameter and 40mm (1.6") deep. It is designed for surface mounted applications that cannot make use of a junction box or ceiling cavity. The canopy is completely enclosed by a backplate, which houses the driver. The pendant drop lengths on this light fixture are adjustable up to the specified maximum.

A vacuum is introduced to a strata composed of hot white and clear glass with copper mesh between. The vacuum causes the white layer to pull away through the embedded mesh, leaving numerous tendrils of white glass suspended within an interstitial space as it goes.

NOTES

- + Purchase replacement lamps online at www.bocci.com/shop/bulbs
- + Please note that the copper mesh used within the 76 may be affected by heat and oxidation during the glass blowing process. These small oxidized edges can sometimes separate within the pendant; this is a natural characteristic of the metal and is seen as an evolution of the piece as it ages.


US Patent # D817,524 S

EU Design Patent # 002840975-0004-0007

Made in Vancouver, Canada

Vancouver
sales@bocci.com
www.bocci.com

Berlin
europa@bocci.com
www.bocci.com




DEEP CANOPY

76.1

PRODUCT SPECIFICATION

© 2021, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.com


BOCCI

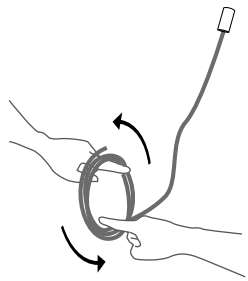

1


Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.

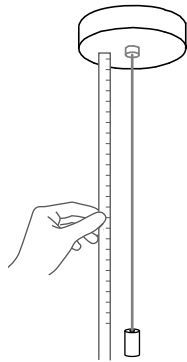

2

Determine the overall drop for the pendant fixture.

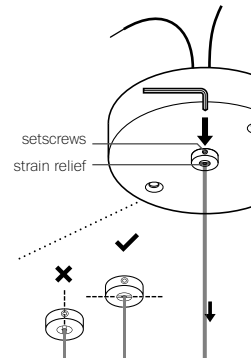

3


Thread the coaxial cable through the canopy, use a 2mm Allen key to loosen the setscrew in the canopy and gently feed the cable through until you have reached your desired drop length.

Use Allen key to tighten the setscrew to hold the strain relief and secure the coaxial cable at its new length. Perform a gentle tug test to ensure it is secure.

DO NOT OVERTIGHTEN.

Note: The strain relief is a black plastic collar around the coaxial cable. There is a single slot opening on the side of the strain relief component. It is essential that this opening is oriented at 90 degrees to set screw chamber. There can be no contact between the set screw and the cable.

RISK OF ELECTRIC SHORT!

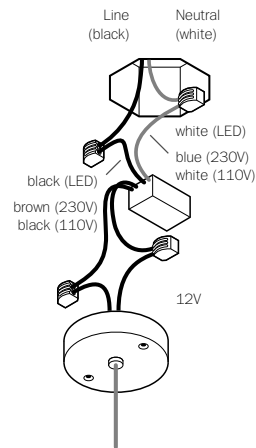


4

Connect the black wire to black and white wire to white wire.

Connect the coaxial cable to the open slots in the terminal block on the 12V side of the drivers.

For multiple pendant installations, ensure that the braided outer wires are all connected to one 12V output wire and all inner insulated wires are connected to the other or a short will occur.

Once all coaxial connections are made, lift the fixture into position and connect the line voltage to the open slot in the appropriate terminal block.




5

The client is responsible to ensure fasteners are attached to a robust structural substrate.

Tuck the power supply and wiring into the canopy. Line up the fastener holes or connect directly to structural ceiling surface using the fasteners provided.

Turn power to fixture on.

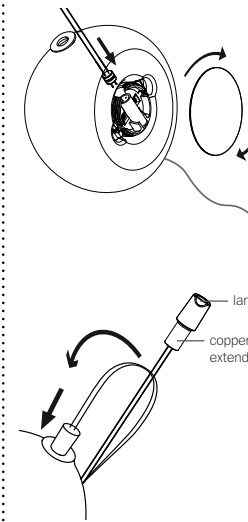

6

Remove the centre cap from 76 pendant. Install 76 pendant by sliding the lampholder at the end of the coaxial cable into the groove in the pendant hardware.


Bocci 0.4w LED lamps are included. Plug the lamp into flexible copper extender. Ensure power to lamp is working correctly.

Hold lamp wires away from the pendant to ensure they do not interfere with spinning cap.

Thread centre cap back on to pendant hardware.

DO NOT OVERTIGHTEN.

Bend the insulated wires and insert the lamp into the small hole in the pendant. Ensure that the lamp does not touch the inner glass bubble.



7

Clean fingerprints from surfaces.

For additional assistance, please contact Bocci:


Vancouver
sales@bocci.com
www.bocci.com

Berlin
europe@bocci.com
www.bocci.com

US Patent Pending

EU Design Patent #
002840975-0004-0007

Made in Vancouver, Canada





DEEP CANOPY

76.1

PRODUCT INSTALLATION INSTRUCTIONS

© 2021, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.com

BOCCI

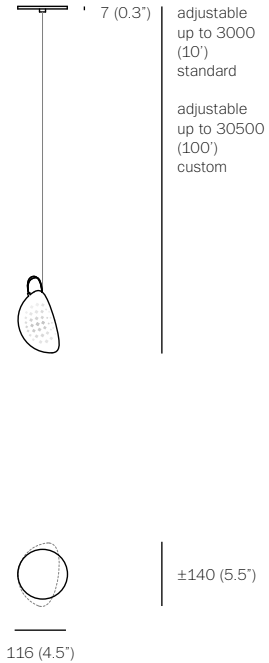

- PENDANTS: one
- MOUNTING: shallow brushed nickel canopy 116mm (4.5") in diameter x 7mm (0.3") deep
- LAMPING: 0.4w LED
- COAX: adjustable. 3000mm (10') standard / up to 30500mm (100') maximum
- MATERIALS: blown glass, copper mesh, braided metal coaxial cable, electrical components brushed nickel canopy
- WEIGHT: approximately 0.7kg (1.5lb)
- POWER SUPPLIES: integral (driver housed within junction box). Drivers included

DESCRIPTION

The 76.1 shallow canopy is a single 76 pendant fixture with a shallow brushed nickel canopy designed to fit over a new or existing 4" octagonal junction box. The canopy is 116mm (4.5") in diameter and 7mm (0.3") deep, which creates a subtle profile that minimizes the impact in the application surface. The pendant drop lengths on this light fixture are adjustable up to the specified maximum.

A vacuum is introduced to a strata composed of hot white and clear glass with copper mesh between. The vacuum causes the white layer to pull away through the embedded mesh, leaving numerous tendrils of white glass suspended within an interstitial space as it goes.

NOTES

- + Purchase replacement lamps online at www.bocci.com/shop/bulbs
- + Please note that the copper mesh used within the 76 may be affected by heat and oxidization during the glass blowing process. These small oxidized edges can sometimes separate within the pendant; this is a natural characteristic of the metal and is seen as an evolution of the piece as it ages.


US Patent # D817,524 S
EU Design Patent # 002840975-0004-0007

Made in Vancouver, Canada

Vancouver
sales@bocci.com
www.bocci.com


Berlin
europe@bocci.com
www.bocci.com

approx 0.7kg (1.5lb)



SHALLOW CANOPY


76.1 PRODUCT SPECIFICATION

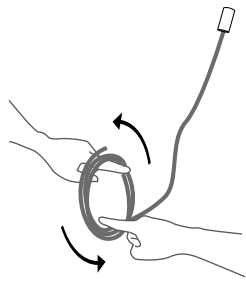

1


Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.

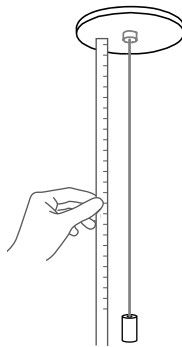

2

Determine the overall drop for the pendant fixture.

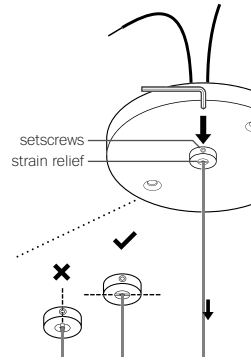

3


Thread the coaxial cable through the canopy, use a 2mm Allen key to loosen the setscrew in the canopy and gently feed the cable through until you have reached your desired drop length.

Use Allen key to tighten the setscrew to hold the strain relief and secure the coaxial cable at its new length. Perform a gentle tug test to ensure it is secure.

DO NOT OVERTIGHTEN.

Note: The strain relief is a black plastic collar around the coaxial cable. There is a single slot opening on the side of the strain relief component. It is essential that this opening is oriented at 90 degrees to set screw chamber. There can be no contact between the set screw and the cable.

RISK OF ELECTRIC SHORT!

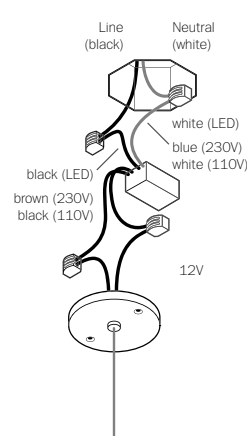


4

Connect the black wire to black and white wire to white wire.

Connect the coaxial cable to the open slots in the terminal block on the 12V side of the drivers.

For multiple pendant installations, ensure that the braided outer wires are all connected to one 12V output wire and all inner insulated wires are connected to the other or a short will occur.

Once all coaxial connections are made, lift the fixture into position and connect the line voltage to the open slot in the appropriate terminal block.

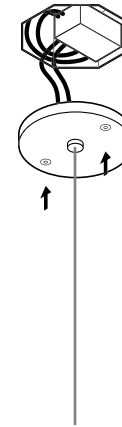


5

The client is responsible to ensure fasteners are attached to a robust structural substrate.

Tuck the power supply and wiring into the octagonal box, if available, and place canopy over top, lining up the fastener holes or connecting directly to structural ceiling surface. Affix canopy with fasteners provided.

Turn power to fixture on.

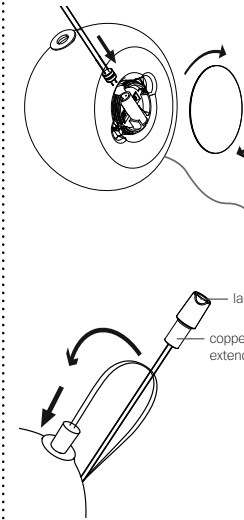

6

Remove the centre cap from 76 pendant. Install 76 pendant by sliding the lampholder at the end of the coaxial cable into the groove in the pendant hardware.

Bocci 0.4w LED lamps are included. Plug the lamp into flexible copper extender. Ensure power to lamp is working correctly.

Hold lamp wires away from the pendant to ensure they do not interfere with spinning cap.

Thread centre cap back on to pendant hardware.

DO NOT OVERTIGHTEN.

Bend the insulated wires and insert the lamp into the small hole in the pendant. Ensure that the lamp does not touch the inner glass bubble.



7

Clean fingerprints from surfaces.

For additional assistance, please contact Bocci:


Vancouver
sales@bocci.com
www.bocci.com

Berlin
europa@bocci.com
www.bocci.com

US Patent Pending

EU Design Patent #
002840975-0004-0007

Made in Vancouver, Canada



SHALLOW CANOPY

76.1

PRODUCT INSTALLATION INSTRUCTIONS

© 2021, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.com

BOCCI